



HCB Auto Tools

Hwang Cherg Bin Specialty Tools Inc. (HCB)

BMW (X5) TRANSMISSION RUBBER MOUNT BUSH EXTRACTOR/ INSTALLER



Price: [Call for Pricing](#)

Product Description :

BMW (X5) TRANSMISSION RUBBER MOUNT BUSH EXTRACTOR/ INSTALLER

'Product Info'

Model/Item No. :

H.C.B-A1201

Country of Origin :

Taiwan

Brand :

H.C.B

Product Specifications /Features :

1.The illustration removal:

*Step 1: Put accessory No. 1-3 into 1-2. Please refer to the removal illustration picture 1 for guidance.

***Step 2: Make sure clip the accessory No. 1-3 to the essence of the transmission, then put the accessory 1-1 into the outer breach of rubber mount to enable the central hole of accessory 1 and rubber mount to keep on a straight line. Then insert the accessory No. 5.**

***Step 3: Install the bearing and nut on the both sides of accessory No. 5 after adjusting 1-4 and tightening 1-3.**

***Step 4: To extract according to picture 2.**

2.The illustration for install:

***Step 1: Insert the locking pin of accessory No. 4 into the of rubber mount. Please refer to the install illustration picture 1 for guidance.**

***Step 2: To complete the installation according to picture 2.**

3.Applicable:BMW (X5, 3000c.c.) before year 2003.

Primary Competitive Advantages :

Well and High Quality Control, Prompt Delivery, New Product, Customer's Design and Logo are Welcome, Competitive Prices

Sales Method :

Export, Manufacture

Payment Term :

T/T, L/C at Sight

on car :



■ **The Illustration for Removal:**



Picture 1



Picture 2


www.hcb-autotools.com

- Step 1: Put accessory No. 1-3 into 1-2. Please refer to the removal illustration picture 1 for guidance.
- Step 2: Make sure clip the accessory No. 1-3 to the essence of the transmission, then put the accessory 1-1 into the outer breach of rubber mount to enable the central hole of accessory 1 and rubber mount to keep on a straight line. Then insert the accessory No. 5.
- Step 3: Install the bearing and nut on the both sides of accessory No. 5 after adjusting 1-4 and tightening 1-3.
- Step 4: To extract according to picture 2.

■ **The Illustration for Install**



Picture 1

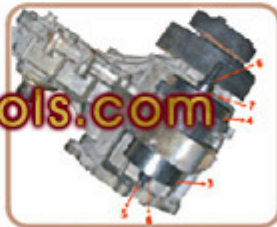

Picture 2

www.hcb-autotools.com

- Step 1: Insert the locking pin of accessory No. 4 into the inner hole of rubber mount. Please refer to the install illustration picture 1 for guidance.
- Step 2: To complete the installation according to picture 2.

■ **Applicable: BMW (X5, 3000c.c.) before year 2003.**